

# SHARP

							洗衣輔加功能				
Model 型號	Program 程式	Operation Time (min) 操作時間 (分鐘)	Default Spin Speed 設定脫水轉速	Default Temperature 設定溫度	Max Load(kg) 最大洗衣容量(公斤)	Rinse Time	Reserve 預約	Rinse 過水 (1-3)	Spin 脫水	Vapour 蒸氣	Water Level 水位
ES-FW75AJ-W	Cotton 棉質衣物	66	(1000 - 400)	40°C (COLD / 20 / 30 / 40 / 60 / 90°C)	7	2 (0 - 5)	●	●	●		●
	ECO 節能衣物	67	(1000 - 400)	60°C (COLD / 20 / 30 / 40 / 60 / 90°C)	7	2 (0 - 5)	●	●	●		
	Super Quick 15分鐘快洗	15	(1000 - 400)	20°C (COLD / 20 / 30 / 40°C)	2	1 (0 - 5)	●	●			
	Rinse + Spin 過水 + 脫水	27	(1000 - 400)	-	7	2 (0 - 6)	●	●	●		
	Wool 羊毛衣物	68	(800 - 400)	30°C (COLD / 20 / 30 / 40°C)	2	2 (0 - 5)	●	●	●		
	Scent 衣物柔順	64	(1000 - 0)	40°C (COLD / 20 / 30 / 40 / 60 / 90°C)	7	2 (2 - 5)	●	●	●		
	Allergy 防敏護理	162	(1000 - 0)	60°C	3	4 (2 - 5)	●	●		●	
	Hygiene 除菌護理	185	(1000 - 0)	60°C (60 / 90°C)	3	4 (2 - 5)	●	●		●	
	Bedding 床品洗滌	69	(800 - 400)	COLD (COLD / 20 / 30 / 40°C)	2	3 (0 - 5)	●	●			
Drum Clean 滾筒清潔	88	(800 - 400)	90°C	-	1						
ES-FW85AJ-W ES-FW85AJ-B	Cotton 棉質衣物	67	(1200 - 400)	40°C (COLD / 20 / 30 / 40 / 60 / 90°C)	8.5	2 (0 - 5)	●	●	●		●
	ECO 節能衣物	68	(1200 - 400)	60°C (COLD / 20 / 30 / 40 / 60 / 90°C)	8.5	2 (0 - 5)	●	●	●		
	Super Quick 15分鐘快洗	15	(1200 - 400)	20°C (COLD / 20 / 30 / 40°C)	2	1 (0 - 5)	●	●			
	Rinse + Spin 過水 + 脫水	28	(1200 - 400)	-	8.5	2 (0 - 6)	●	●	●		
	Wool 羊毛衣物	68	(800 - 400)	30°C (COLD / 20 / 30 / 40°C)	2	2 (0 - 5)	●	●	●		
	Scent 衣物柔順	65	(1200 - 0)	40°C (COLD / 20 / 30 / 40 / 60 / 90°C)	8.5	2 (2 - 5)	●	●	●	●	
	Allergy 防敏護理	163	(1200 - 0)	60°C	3	4 (2 - 5)	●	●		●	
	Hygiene 除菌護理	186	(1200 - 0)	60°C (60 / 90°C)	3	4 (2 - 5)	●	●			
	Bedding 床品洗滌	69	(800 - 400)	COLD (COLD / 20 / 30 / 40°C)	2	3 (0 - 5)	●	●			
Drum Clean 滾筒清潔	88	(800 - 400)	90°C	-	1						

When the temperature is set to COLD, the screen shows no numerical value.  
當溫度選擇為COLD時，螢幕沒有數值顯示。

To use the Spin function, first select the "Rinse + Spin" program, then set rinse to 0. This activates the spin-only mode. The spin-only cycle lasts 9 minutes for the 7 kg model and 10 minutes for the 8.5 kg model.  
如需使用淨脫水，先選擇"過水+脫水"程序，再將過水次數選擇為0，即為淨脫水功能。7公斤型號的淨脫水程序為9分鐘，8.5公斤型號的淨脫水程序為10分鐘。

NOTE: The Operation time may vary from above due to water temperature, wash load and other factor. The figures are for reference in condition of default setting, no load.  
注意：由於水溫、洗滌容量和其他因素，操作時間可能會有所不同。以上是原廠設定、在沒有洗滌衣物的情況下作參考。