



洗衣輔加功能

Model 型號	Program 程式	Operation Time (min) 操作時間 (分鐘)	Default Spin Speed 設定脫水轉速	Default Temperature 設定溫度	Max Load(kg) 最大衣物容量(公斤)	Rinse Time	Prewash 預洗	Delay 預約	Temp. 溫度	Rinse 過水	Spin 脫水	Dry 乾衣	Scent 柔順	Steam 蒸氣	Water Level 水位	
ES-FWD105AJ-B	Cotton 棉質衣物	90	1400 (1400 - 0)	40°C (COLD / 20 / 30 / 40 / 60 / 90°C)	10.5	2 (0 - 5)	●	●	●	●	●	●	●	●	●	
	ECO 節能衣物	84	1400 (1400 - 0)	60°C (COLD / 20 / 30 / 40 / 60 / 90°C)	10.5	1 (0 - 5)	●	●	●	●	●	●	●	●	●	
	Rinse + Spin 過水 + 脫水	32	1400 (1400 - 0)	-	10.5	2 (0 - 5)		●		●	●	●	●			
	Spin 脫水	11	1400 (1400 - 0)	-	10.5	-		●			●	●				
	Super Quick 15分鐘快洗	15	1000 (1400 - 0)	20°C (COLD / 20 / 30 / 40°C)	2	1 (0 - 5)		●	●	●	●					
	Wash&Dry 60' 60分鐘洗衣乾衣	60	1400	40°C (COLD / 20 / 30 / 40°C)	1	2		●	●							
	Wash&Dry 洗衣乾衣	136	1400 (1400 - 1000)	40°C (COLD / 20 / 30 / 40 / 60 / 90°C)	7	2 (0 - 5)	●	●	●	●	●	●	●	●	●	●
	Dry 乾衣	105	-	-	7	-		●				●				
	Dry AirWash 無水離子除菌	自定	-	-	1	-		●					靜止/旋轉			
	Hygiene 除菌護理	221	1400 (1400 - 0)	60°C (60 / 90°C)	4	4 (2 - 5)	●	●	●	●	●	●	●	●	●	●
	Allergy 防敏護理	200	1400 (1400 - 0)	60°C	4	4 (2 - 5)		●		●	●	●	●	●	●	●
	Intensive 深層潔淨	187	1400 (1400 - 0)	60°C (COLD / 20 / 30 / 40 / 60 / 90°C)	2	4 (0 - 5)	●	●	●	●	●	●	●	●	●	●
	Bedding 床品洗滌	91	800 (800 - 0)	COLD (COLD / 20 / 30 / 40°C)	2	3 (0 - 5)		●	●	●	●			●	●	
	Wool 羊毛衣物	68	800 (800 - 0)	30°C (COLD / 20 / 30 / 40°C)	2	2 (0 - 5)		●	●	●	●			●		
Drum Clean 滾筒清潔	88	800	90°C	-	1											

When the temperature is set to COLD, the screen shows no numerical value.  
當溫度選擇為COLD時，螢幕沒有數值顯示。

To use the Spin function, first select the "Rinse + Spin" program, then set rinse to 0. This activates the spin-only mode.  
如需使用淨脫水，先選擇"過水+脫水"程序，再將過水次數選擇為0，即為淨脫水功能。

NOTE: The Operation time may vary from above due to water temperature, wash load and other factor. The figures are for reference in condition of default setting, no load.  
注意：由於水溫、洗滌容量和其他因素，操作時間可能會有所不同。以上是原廠設定、在沒有洗滌衣物的情況下作參考。